

USER'S MANUAL SK-2500C

CONTENTS

1.	GUI	DE	1			
	1.1 1.2 1.3 1.4	IMPORTANT SAFETY INSTRUCTIONS	1			
2.	OUT	TLINE	5			
3.	THE	MENU OSD INSTRUCTION6	5			
	3.1	DVB-T26	5			
		DVB-C				
		CHANNEL				
		SPECTRUM				
		MULTIMEDIA12 SYSTEM SETTING12				
4.		HNICAL SPECIFICATION14				
5.	TRO	OUBLE SHOOTING16	5. TROUBLE SHOOTING			

1. GUIDE

1.1 IMPORTANT SAFETY INSTRUCTIONS

Thank you for choosing our product. Before installation, we would like to remind you some notes, which is very important for operating safely and properly, as follows:

- Be sure to read this user manual before starting your operation.
- You must install the dish with correct direction and angle. If the dish is not working properly, contact your local dealer.
- When the unit is suddenly moved to a hot area from a cold area, it may cause some problems. In that case, turn off the power, and turn on again after 1-2 hours.
- Keep meter placed in clean space with sufficient ventilation.
- Do not cover the meter with or place it on a unit that emits heat.
- Clean the case by a soft cloth with a little washing liquid.
- · Do not remove the cover.
- Do not let the unit exposed to extreme heat, cold or humid conditions.
- No liquids or any other materials to come inside of the unit.


1.2 UNPACKING

Open the package and make sure it includes all below items, if any missing, please contact the reseller for replacement.

- 1. Digital Satellite Meter
- 2. User's manual
- 3. AV cable
- 4. Car charger cable
- 5. Power Adaptor
- 6. Strap of carrying case

NOTE: Please refer to our actual configuration.

1.3 PRODUCT OVERVIEW & ILLUSTRATION

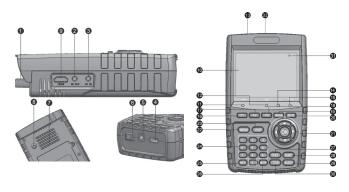

NO	Description	FUNCTION
1	LNB In	Connect to satellite antenna cable
2	AV OUT	Connect to AV port for TV
3	AV IN	Connect to AV port for meter
4	USB Port	Connect to USB memory
5	DC Slot	Connect to adaptor input
6	Power Switch	Turn on/off meter
7	Speaker	Speaker integrated
8	Torch LED	Night lighting
9	HD OUT	Use HD cable to connect for TV
10	LCD	TFT LCD Screen
11	Power	Power indicator light
12	ANT	Antenna power indicator light
13	DC OUT	DC 12V output for extern equipment
14	LOCK	Signal lock indicator light

NO	Description	FUNCTION
15	Charger (Note1)	Charger indicator light
16	F1	Auxiliary function key
17	F2	Auxiliary function key
18	F3	Auxiliary function key
19	SCAN	'Quick Search'menu shortcut key
20	AV-S (Note2)	Switch AV mode: AV Normal; AV IN and AV out
21	NEVIGATION KEY	Volume Control or move cursor, channel or change, confirmetc
22	MENU	Show the main menu on the screen or jump back to previous menu in sub-menu setting conditions
23	EXIT	Escape from present menu and save the settings
24	0-9	Number key to select channels or enter programming
25	INFO	INFO key
26	MUTE	MUTE
27	Red & TTXT	Red KEY & Teletext interface
28	Green & SUBT	Green key & Subtitle interface
29	BLUE &AUDIO	Blue key & Audio interface
30	Orange &TV/R	Orange key & TV and radio switch
31		DC 12V output for external equipment

Note 1: When the battery charged sufficient, the charge indicator is going out. When the battery is insufficient, indicator flashing.

1.4 INSTALLATION OF METER



2. OUTLINE

- 3.5 Inch High Definition TFT LCD Screen
- Fully DVB-T/DVB-T2/DVB-C, MPEG-2/MPEG-4 compliant
- H.265(8bit) Hardware decoding
- Digital meter for signal strength and quality
- Supports scan of Auto, Manual
- Sound and Light Alarm for Locking Signal
- Speaker Integrated
- Support both AV out and AV in
- Support both HD out and HD in
- ANT short protect
- 7.4V/3000mAh Li-Ion Battery Included
- DC 12V output for monitor
- Software upgrade via USB port
- Easy to carry

3. THE MENU OSD INSTRUCTION

If you have installed and connected the cables to the receiver, pressing MENU to display the Main Menu.

- DVB-T2
- DVB-C
- Channel
- Spectrum
- Multimedia
- System Setting



177.500 MH

Press the keys of $\triangle \nabla \blacktriangleleft \triangleright$ to move the cursor up or down in the menu interface, then use $\bigcirc K$ to confirm a selection.

3.1 DVB-T2

Select DVB-T2, then press OK into the Scan Setup.

3.1.1 COUNTRY

Press **◄** key to change the default country.

3.1.2 CHANNEL NO

Press **◄** ▶ key to change the channel number.

3.1.3 FREOUENCY

Frequency of the current channel, input the value by using the numeric keys.

3.1.4 BANDWIDTH

Press ◀▶ key to change the bandwidth, we can select 5, 6, 7 or 8M.

3.1.5 MODE

Press ◀▶ key to change the DVB standard, we have there types including T/T2/T+T2, you can select one you want.

3.1.6 BEEP TONE

Press ◀▶ key to switch beep tone ON/OFF. If we open the beep tone, when we enter into the search screen, the beep of lock alarm will open.

3.1.7 LCN

Press **♦** key to switch LCN ON/OFF.

3.1.8 ANTENNA POWER

Press ◀▶ key to change the antenna power, we have there types including 5V/12V/24V, you can select one you want.

3.1.9 ANTENNA SETTING

Press ◀▶ key to switch the antenna power ON/OFF.

3.1.10 OUICK SEARCH

In the Channel Find interface, press **OK** to enter into the quick search.



• Scan: Press OK /red key to search current channel.



 Auto Scan: Press green key to auto blind search the current channel.



• S/Q Zoom: Press orange key to enlarge showing of the signal strength and quality.



• Constellation: Press the blue key into the constellation.



3 2 DVR-C

Select DVB-C, then press OK into the Scan Setup.

Press **◄**▶ key to change the default country.

3.2.2 CHANNEL NO

3.2.1 COUNTRY

Press **◄**▶ key to change the channel number.

3.2.3 FREOUENCY

Frequency of the current channel, input the value by using the number keys.

3.2.4 BEEP TONE

Press ◀▶ key to switch beep tone. If we open the beep tone, the beep of lock alarm will open when we enter into the search screen

3.2.5 OUICK SEARCH

Please refer to 3.1.9 QUICK SEARCH.



3 3 CHANNEI

- TV List
- Radio List
- EPG
- Loop Search

Channel TV List Radio List Loop Search

3.3.1 TV LIST

Lock

Press ▲▼ key to select the program that we want to lock or unlock, then press red key to lock or unlock the proaram.



Del

Press ▲▼ key to select the

program that we want to delete, then press green key, it will appear a "x" label on the program's right side. When we have dealt with all the programs need to be processed, press MENU, it will appear a comfirmation message to remind you whether to delete selected channels or not

Skip

Press AV key to select the program that we want to skip, then press orange key, it will appear a tick label on the program's right side.

Rename

Press ▲▼ key to select the program that we want to rename, then press blue key to rename the program.

3.3.2 RADIO LIST

Please refer to the operation of "TV List".

3.3.3 EPG

Press ▲▼ key to change program. If the current program has EPG information, it will appear on the right side of the window. Press ◀▶ key to change the day of the EPG information.

Loop Search

We can see 8 TP or channels when we enter into this interface, and press **OK** to edit.

There are 3 modes we can choose: DVB-T2 and DVB-C. Press the red key to change. It will finish loop search after edition, then singal strenth and quality of each TP or channel will be displayed on the screen



	L	oop Search	
Country	4	Germany	
Channel 1	4	5-177500-7	Þ
Channel 2	4	6-184500-7	·
Channel 3	4	7-191500-7	·
Channel 4	4	8-198500-7	·
Channel 5	4	9-205500-7	Þ
Channel 6	4	10-212500-7	·
Channel 7	4	11-219500-7	·
Channel 8	4	12-226500-7	
■ Mode		DVB-T2	



3.4 SPECTRUM

- SPECTRUM T2
- SPECTRUM C



3.4.1 SPECTRUM T2

When we enter into this interface, we can press ◀▶ key to scan some information about spectrum in different frequency point.

- Full/Ch: Press red key to make all the frequency points we can see on the window or to make some frequency points on it.
- Zoom: Press green key to enlarge showing the point you current select, and press again it will be back.



Spectrum T2



- Locked: Press orange key to lock all the current frequency points, and remain unchanged unless you press again.
- Scan: When the frequency points have been locked, you can press blue key to receive signal on a point.

3.4.2 CABLE-SPECTRUM

Please refer to Terrestrial-Spectrum.

3.5 MULTIMEDIA

Will need to play the files in the USB and insert it into the USB port.

Select a file and press **OK** to play it.



3.6 SYSTEM SETTING

Language

Press **◄**▶ key to change the OSD Language.

· Country Region

Press **◄▶** key to change the country

Aspect Ratio

Press ◀► key to change the aspect ratio: 4:3 LB/4:3 PS/16:9/full screen.

Video Resolution

Press ◀▶ key to change the video output resolution: 480p/576p /720p/1080i/1080p.

HDMI Audio

Press ◀▶ key to change the digital audio output format: PCM/ RAW/MUTE.

• Time Zone

Press **◄**▶ key to change the Time Zone.

System Lock





Press **◄**▶ key to switch system lock on/off.

PWR Unit

Press ◀▶ key to change the PWR unit: dBm/dBuV/dBmV.

Torch

Press **♦** key to switch torch on/off.

KB-BackLight

Press **◄** key to switch keyboard LED on/off.

Upgrade

Will update the file into the USB, then insert the machine. Press **OK** to update interface, use the direction key to select update file, and press **OK** to update.

Warning: Please don't turn power off or pull out the USB, otherwise it will damage the machine's software, and can't boot again.

• Factory Reset

Press **♦** key, then press **0**K to confirm factory reset.

NOTE: If you set factory setting, all the user settings and the database will be reset.

Version

Press **OK** to see some information about this hardware/soft-ware

4. TECHNICAL SPECIFICATION

TRANSMISSION STANDARDS				
DVB-T/T2/C				
DVB-T/T2/C INPUT/DEN	DVB-T/T2/C INPUT/DEMODULATION			
Connector Type	Female Type			
Input Frequency	48 to 862 MHz			
Signal Input Level	-79.5dBm (MAX)			
ANT Supply	12V, 18V/24V Imax 100mA			
Demodulation Type	QPSK, 16QAM, 64QAM, 256QAM			
LCD FEATURES				
LCD Type	TFT Transmissive			
Number of Dots	480 (RGB) x272			
Active area (WxH)	95.04x53.86 mm2			
AV output interface				
Connector Type	3.5 mm jack			
Video Output	CVBS			
Audio Output	Stereo Audio L/R output			
HDMI output connecter				
Format	HDMI 1.3a			
AV input interface				
Connector Type	3.5 mm jack			
Video Input	CVBS			
Audio Input	Stereo Audio L/R input			
AUDIO/VIDEO PROCESSING				
Video decompression	MPEG-2 MP@HL, MPEG-1 Decoding, MPEG-4 ASP@L5 HD resolution, H.264 MP&HP@L4, HW JPEG decoding			

PAL-25 frame@720*576, NTSC-30 frame@720*480	
Support conversion for different video formats	
4:3, 16:9, By Pan & Scan and Letter Box conversion	
MPEG-1 Layer I/II, MPEG-2 Layer I/II	
Stereo, Mono,R/L	
USB	
USB2.0 interface	
NTFS, FAT32, FAT16	
wma, mp3, mp4, avi, jpg, jpeg, bmp, img	
NOVATEK	
500MHz	
7.4V/3000mAh (The machine behind labeling shall prevail)	
OUTPUT: DC12V/1.5A, INTUPT: 100-240VAC 50/60Hz (Will be subject to actual configuration)	
Max. 10W	
PHYSICAL CHARACERSTICS	
9.5x15.5x4.5 cm ³	
1kg	

5. TROUBLE SHOOTING

Problem	Possible Causes	What To Do		
No display light up	Power switch is not on Run out of bat- teries	Check to make sure power on. Even on adapter		
No sound or picture, but the front panel power light is ON.	AV IN jack insert, but no video input	Pull out AV IN cable		
No sound or picture	The antenna is not pointing at the signal tower.	Adjust the antenna. Check the Signal Level in the Antenna Setup Menu		
	No signal or weak signal	Check the cable connections.		
Bad picture/ Blocking Error	The antenna is not pointing at the signal tower	Adjust the antenna.		
_	Signal is too strong	Connect a signal atten- uator to the RF input		
	antenna is too small	Change to a larger antenna		

Problem	Possible Causes	What To Do	
AV out No pic- ture(Video)	The system is connected by SCART cable and TV is not in AV mode.	Check the UHF channel fixed in your system and tune the UHF properly.	
	Out of battery	Even on adapter	
The key is not working	Key blocks	make sure no blocks between the front panel	

NOTE: If you still cannot resolve the problem with above reference. Please contact the local dealer or their after-sales service center.





